

# INSTRUCTIONS FOR 17" UNIT MODEL 87211WT 87211SN 87211OI

## BEFORE YOU START:



Turn wall switch OFF  
Apaga el switch de la pared



Switch main power OFF  
Apaga el switch principal de la caja



Or unscrew circuit fuse  
O desconecte el fusible del circuito

### IMPORTANT

• FIXTURE'S GROUND WIRE MUST BE CONNECTED FOR LAMP TO OPERATE.

### IMPORTANTE

• EL ALAMBRE DE TIERRA DEL APARATO DEBE SER CONECTADO PARA QUE LA LAMPARA OPERE.

CAUTION: IF POWER SUPPLY WIRES OR CORDS ARE LOCATED WITHIN THREE INCHES OF BALLAST, USE WIRE OR CORD SUITABLE FOR AT LEAST 90°C (194°F). TO PREVENT RISK OF FIRE, DO NOT USE FIXTURE ON DIMMING CIRCUITS.

PRECAUCION: SI LOS ALAMBRES O CORDONES DE PODER ELECTRICO ESTAN LOCALISADOS ENTRE TRES PULGAS DEL TRANSFORMADOR, USE ALAMBRES O CORDONES QUE SEAN A LO MENOS DE 90°C (194°F). PARA EVITAR EL RIESGO DE FUEGO, NO USE EL APARATO CON ATENUADORES DE LUZ.

