


WARNING: WIRES NEED TO BE CONNECTED TO DRIVER FOUND IN CANOPY AND SHOULD NOT CONECT DIRECTLY TO POWER SOURCE OR A SHORT MIGHT OCCUR.

Electrical Wiring:

1. Identify the positive and negative brown wires from the lamp: the Brown Smooth Wire with writing and labeled "P" is the positive electrode of the wire. The Brown Rigid Wire labeled "N" is the negative electrode wire.
2. Refer to the picture below for assembly of wire to driver instructions:
 - a. In the canopy you will find the driver
 - b. Take Brown Smooth Wire (P) from the lamp body and connect to the Red (+) wire
 - c. Take the Ribbed Brown Wire (N) and connect to the Black (-) wire from the output side of the driver
 - d. Take the White wire from input side and connect to neutral feed of electrical source
 - e. Take Black Wire from Input side of driver and connect to live electrical source.

remark: *The driver is shown outside of the canopy for easy understanding of wire connection. In actuality, this driver is inside the canopy.*

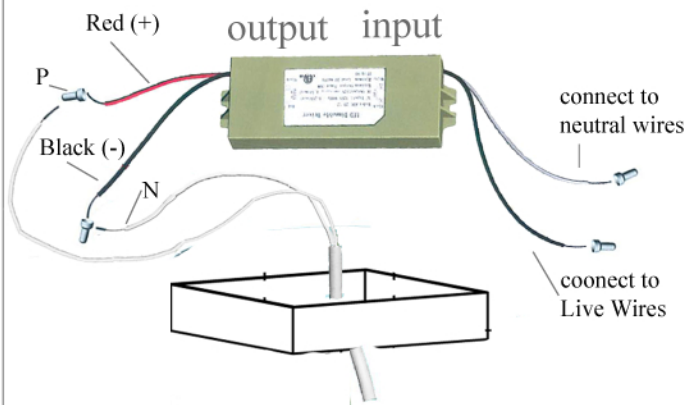

Assembling:

1. Decide the height of the lamp and the number of rods needed. Rod (B) is 12" long (6pcs are provided) Rod (C) is 6" long (2pc provided)
2. Thread Rod (C) to Coupler (D) thread Rod (B) to Rod (C)

remark: *add another Rod (B) to Rod (B) according to desired height*
You will need to do this step two times
3. Thread Canopy (A) onto Rod (B)
4. Attach fixture to the Outlet Box (J) with the screws (H) and (I) and passing through holes on the Canopy (A). Secure with Ball Finials (G)

