






## Modern House Number Installation Instructions

### Surface

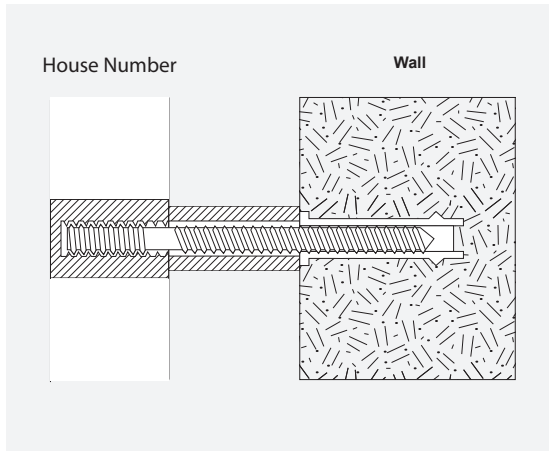


Use 1/4" drill bit for wall anchors.

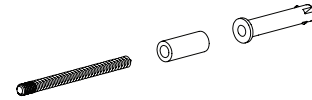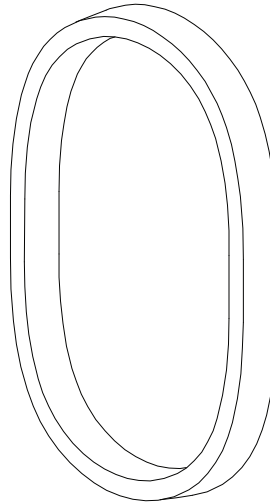

#### Floating Mount


- Install with threaded rods, standoffs and anchors

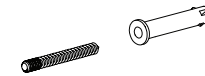



#### Flush Mount

- Install with threaded rods and anchors

### Thru-Bolt

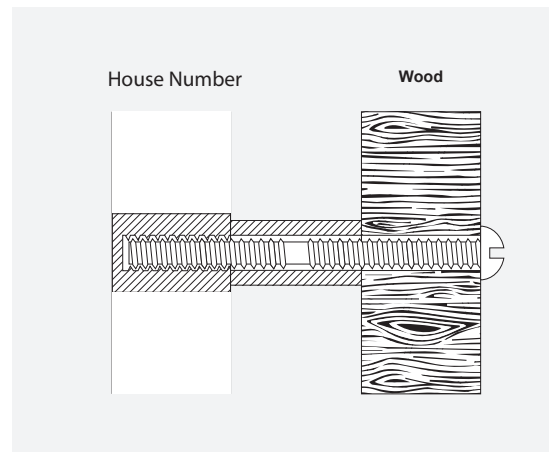

Use 3/16" drill bit for breakaway screws.

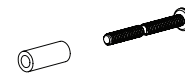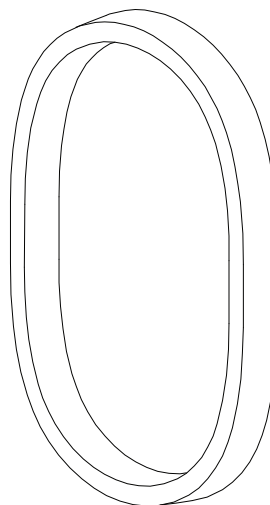

#### Floating Mount

- Install with standoffs and breakaway screws



#### Flush Mount

- Install with breakaway screws