




# Contemporary Lighting

PRODUCT NAME: Bella  
ITEM NUMBER: E23150-126BRZGLD

Please consult your electrician for hanging fixture and wiring



The fixture is designed to work with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:  
Lutron MACL-153M  
Lutron DVL-153P  
Lutron SCL-153P  
Leviton IPL06-10Z  
Leviton 6674-POW


Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

**WARNING:** Wires need to be connected to driver found in canopy and should not connect directly to power source or a short might occur.



LED 1 x 5W Bulb

MADE IN CHINA  
Page 1 of (3)


**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation




Locate all hardware & components before discarding packaging

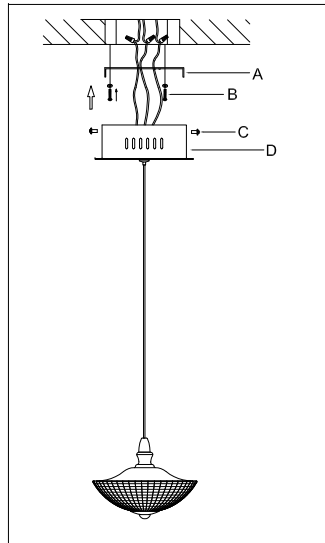

Step 1: Remove mounting bracket (A) from Canopy (D) and install bracket (A) to electrical box by attaching anchors (B).



Step 2: Wire fixture to wires in outlet box. Black wire is positive, white is neutral, bare wire is ground.

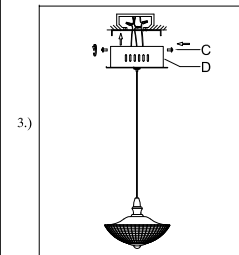

Step 3: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install canopy use canopy screws (C).

**Cleaning & Care:**  
Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.

Page 2 of (3)

**Pendant Wires**

**Driver Wires**

Pendant	Driver
Inner Wire (+)	Driver Red (+)
Outer Mesh (-)	Driver Black (-)

Step 4. If wires are cut in the process of adjusting the height, please note the pendants consist of an outer mesh (ground) and inner (Live) wire that must be separated before rejoining to driver

Page 3 of (3)