


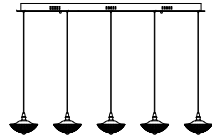

Contemporary Lighting

PRODUCT NAME: Bella
ITEM NUMBER: E23155-126BRZGLD

Please consult your electrician for hanging fixture and wiring



The fixture is designed with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:
Lutron MACL-153M
Lutron DVL-153P
Lutron SCL-153P
Leviton IPL06-10Z
Leviton 6674-POW


Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

WARNING: Wires need to be connected to driver found in canopy and should not connect directly to power source or a short might occur.


LED 5 x 5W Bulbs

MADE IN CHINA
Page 1 of (3)


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

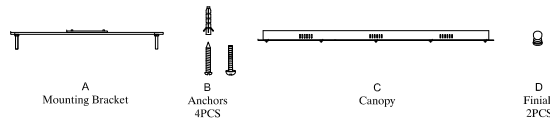

Locate all hardware & components before discarding packaging

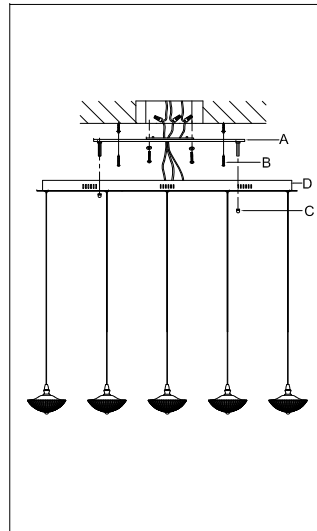


Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

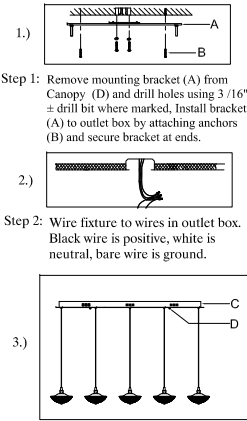


- 1.) **Step 1:** Remove mounting bracket (A) from Canopy (D) and drill holes using 3/16" ± drill bit where marked. Install bracket (A) to outlet box by attaching anchors (B) and secure bracket at ends.
- 2.) **Step 2:** Wire fixture to wires in outlet box. Black wire is positive, white is neutral, bare wire is ground.
- 3.) **Step 3:** Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install canopy use canopy screws (C).

Page 2 of (3)

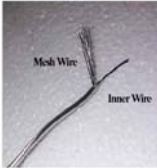


Pendant Wires

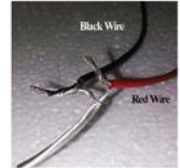


Driver Wires

Pendant	Driver
Inner Wire (+)	Driver Red (+)
Outer Mesh (-)	Driver Black (-)

Step 4. If wires are cut in the process of adjusting the height, please note the pendants consist of an outer mesh wire (ground) and inner (Live) wire that must be separated before re-joining with the driver output wires. Pendants are wired in series to the driver, as shown below

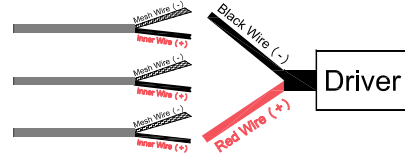

Driver HL35013TD

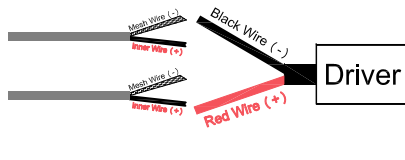

Driver HL35010TD

Page 3 of (3)