



PRODUCT NAME:Cocoon 1-Light Pendant
ITEM NUMBER:12186WTPC

Please consult your electrician for hanging fixture and wiring.

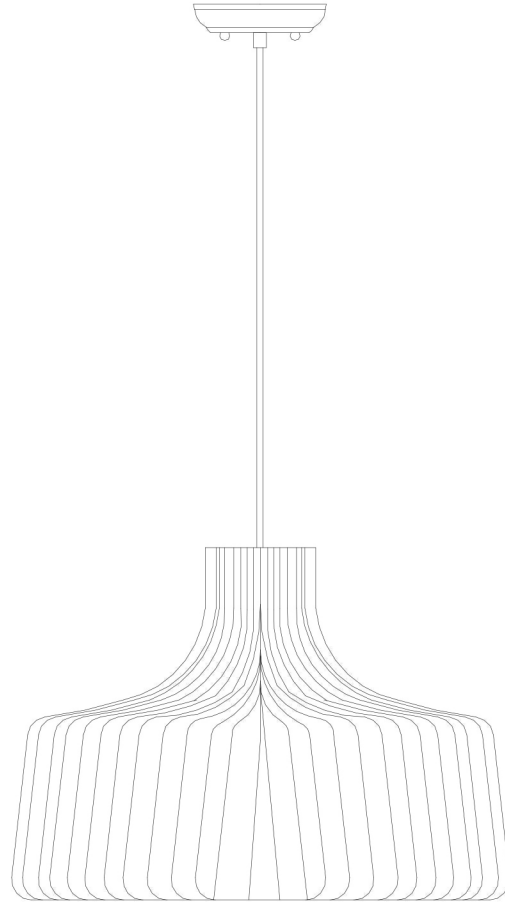

Bulb(not included):60W E26

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

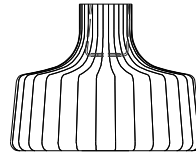

Bracket (A)

Canopy (B)

Finial (C)



Body (D)

Shade (E)


Outer Ring (F)

Bulb (G)

Locate all hardware & components before discarding packaging

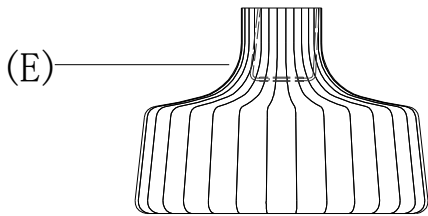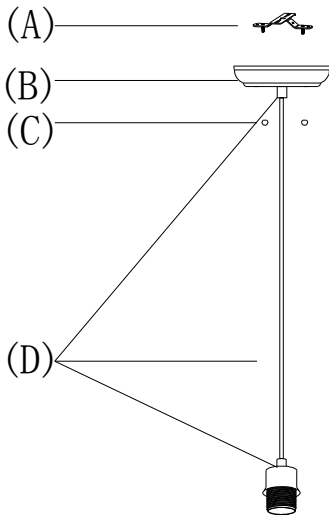


1.)

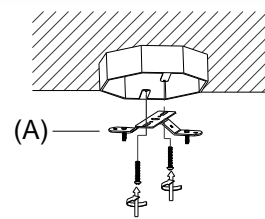


Step.1: Remove mounting bracket(A) from fixture and install to electrical box.

2.)

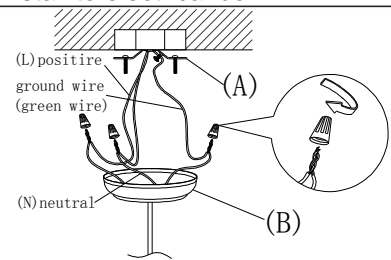


Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.

3.)

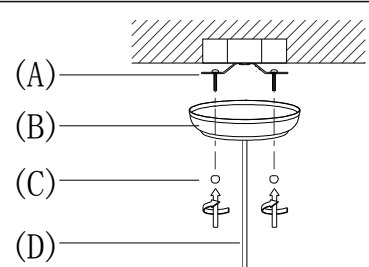

Step.3: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install body(D) to bracket(A) and tighten finials (C) on the canopy (B) to secure.

4.)

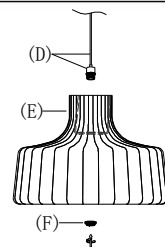

Step.4: Run socket through shade(E) and secure using screw ring(F) on socket. Screw in incandescent bulb(G). Remove plastic protection from Chrome lip at bottom of Shade.

Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.