


Installation Instructions

Model 21463NKPN

1. Turn breaker off for circuit on outlet where fixture is to be installed.
2. Remove mounting bracket from fixture and install to electrical box
3. Install desired fixtures pole to obtain desired mounting height.
4. Wire fixture to wires in outlet box. Green wire is for Ground.
5. Install fixture to mounting bracket and secure with mounting nuts 14
6. Install maximum 40 watt G9 xenon lamps

WARNING!

Xenon lamps burn hot. Allow 15 minutes after turning off before touching!

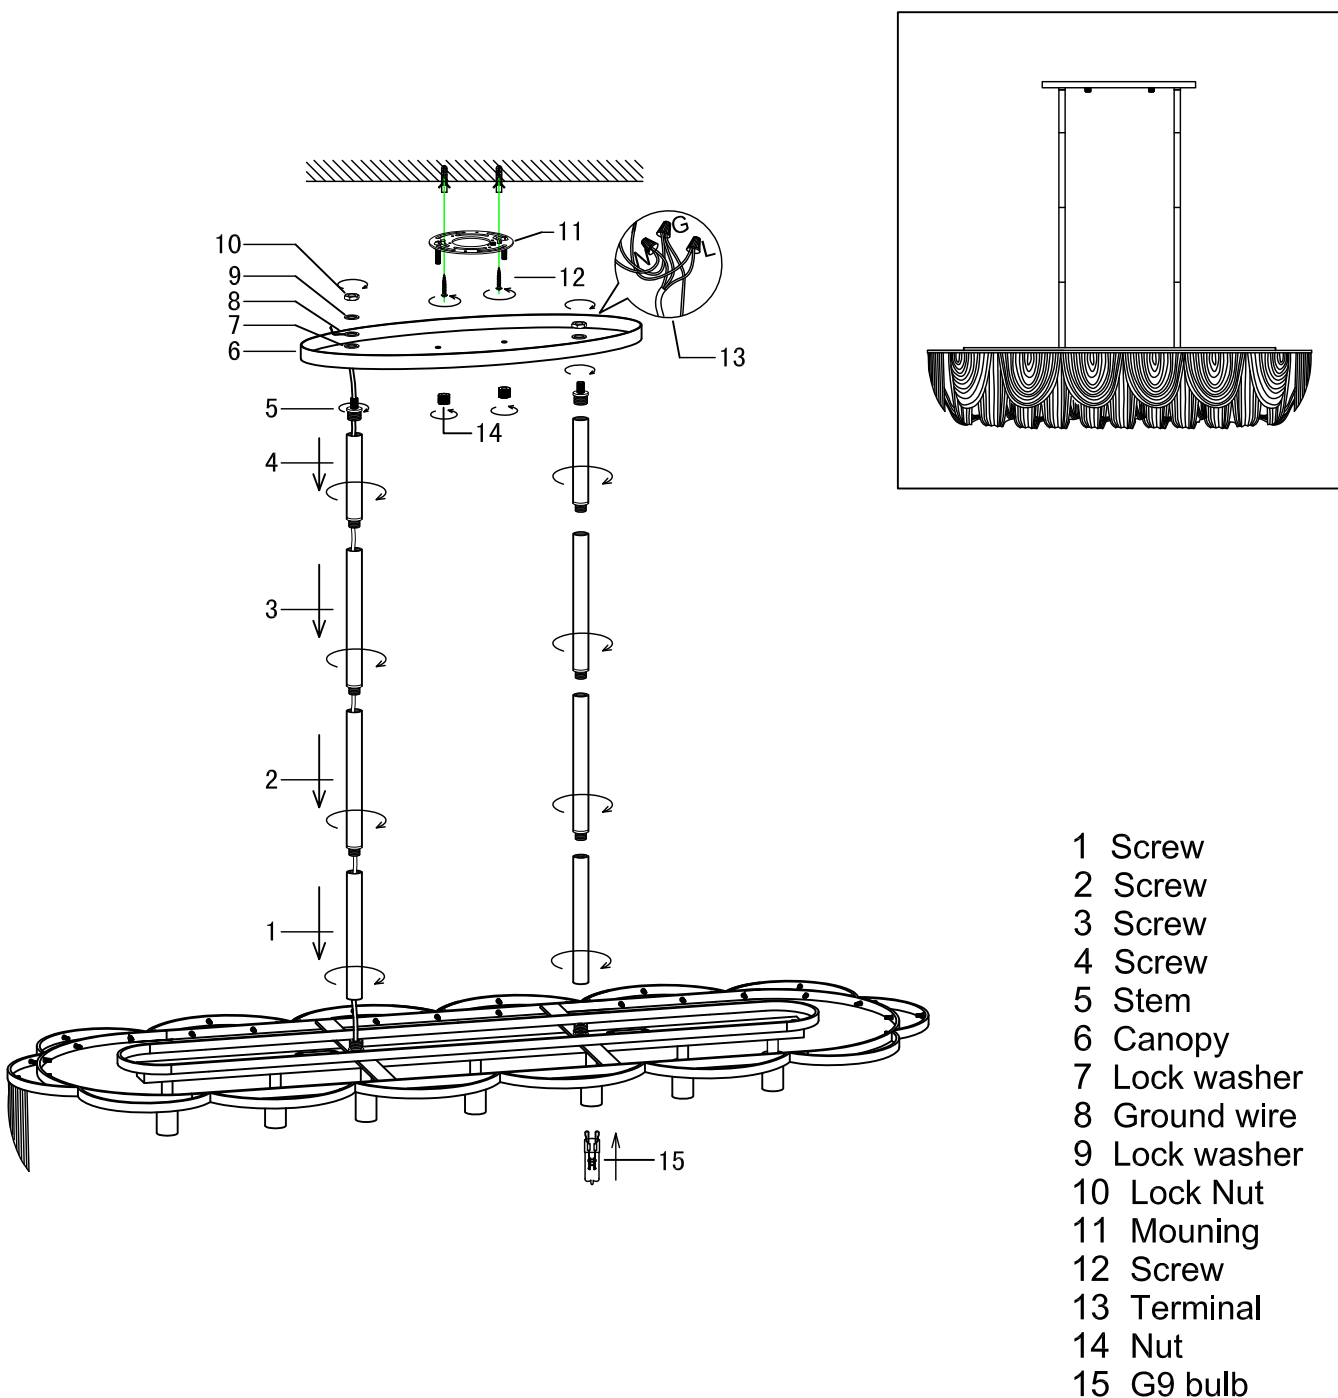

- 1 Screw
- 2 Screw
- 3 Screw
- 4 Screw
- 5 Stem
- 6 Canopy
- 7 Lock washer
- 8 Ground wire
- 9 Lock washer
- 10 Lock Nut
- 11 Mouning
- 12 Screw
- 13 Terminal
- 14 Nut
- 15 G9 bulb