
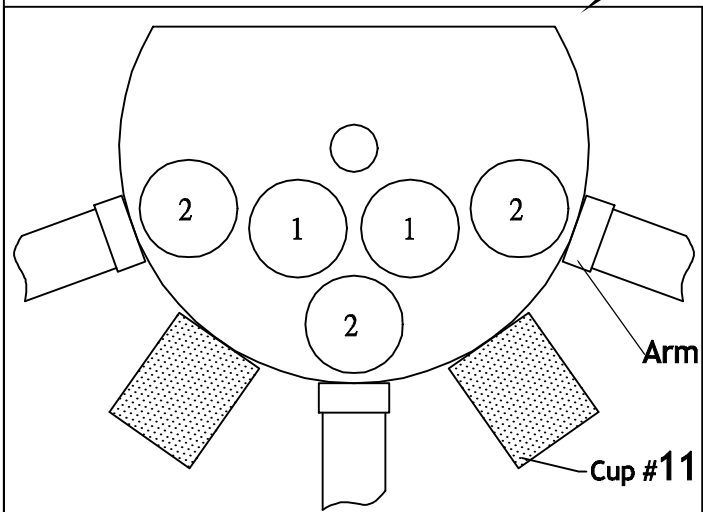


# PARADISE

## INSTALLATION INSTRUCTION

**!! Please use the gloves enclosed before handling any parts or crystal**

1. Screw the Top Column to Nipple #1. Attach the fixture to the outlet.  
Please refer to the Installation Instruction enclosed for installation and wiring.
2. Insert Crystal arm#1 into Cup#1. Remove label prior to installing crystal. The magnet in the cup will hold the arm in place. Snap Check Ring onto cup.
3. Repeat step 2 for crystal arm #2 and #11. Please refer to the DISTRIBUTION DIAGRAM for positioning.
4. Insert the Candle Covers over the Sockets with the indented point down and twist lock onto Lock Ring.
5. Install the Bottom Crystal Cover over Nipple #2 and secure with the Bottom Finial.

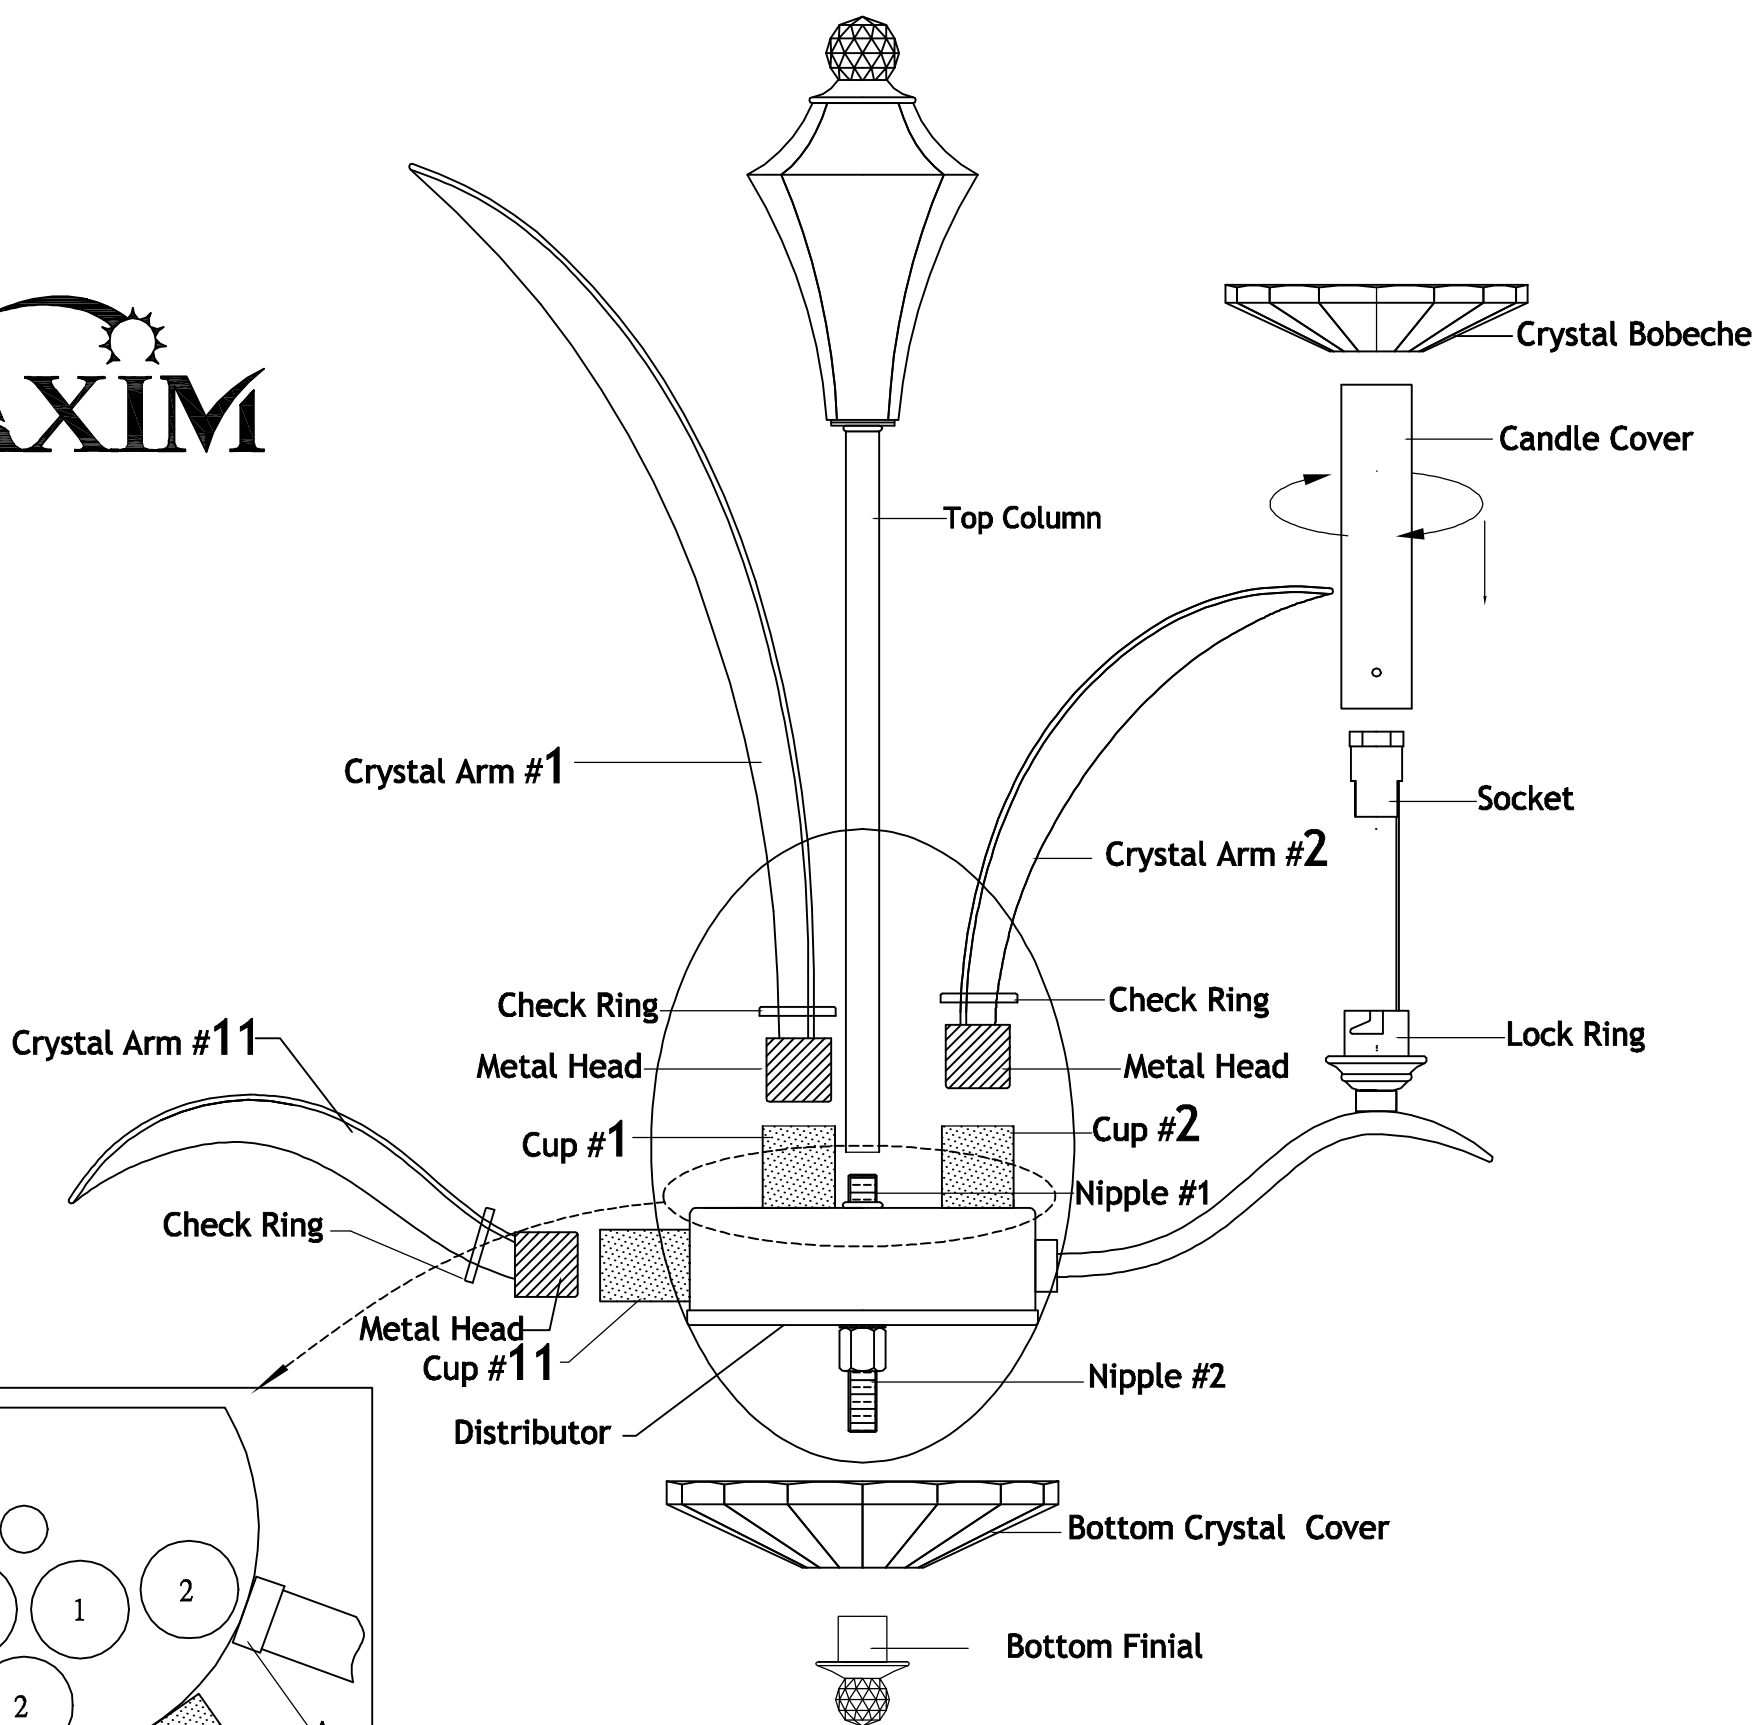

**MODEL 39942**

**For missing parts or installation questions call 1-800-486-2946**

<b>COMPONENT LIST</b>			
<b>No.</b>	<b>Component</b>	<b>Q'ty</b>	<b>Replacement Part No.</b>
01	Canopy Kit		
	Wire Nut	3Pcs	
	Ball	2Pcs	
	Universal Mounting Strap	1Pc	
	Ground Screw	1Pc	
	Mounting Screws(L25mm)	2Pcs	
	Hex nut	2Pcs	
	Mounting Screws(L28mm)	2Pcs	
02	Crystal Bobeche	3Pcs	CRYCOV027
03	Candle Cover	3Pcs	
04	Crystal Arm #1	2Pcs	CRYARM001
05	Crystal Arm #2	3Pcs	CRYARM002
06	Crystal Arm #11	2Pcs	CRYARM011
07	Bottom Crystal Cover	1Pc	CRYCOV025
08	Bottom Finial	1Pc	FINCRY022
09	Top Column	1Pc	
10	Glove	1pair	