

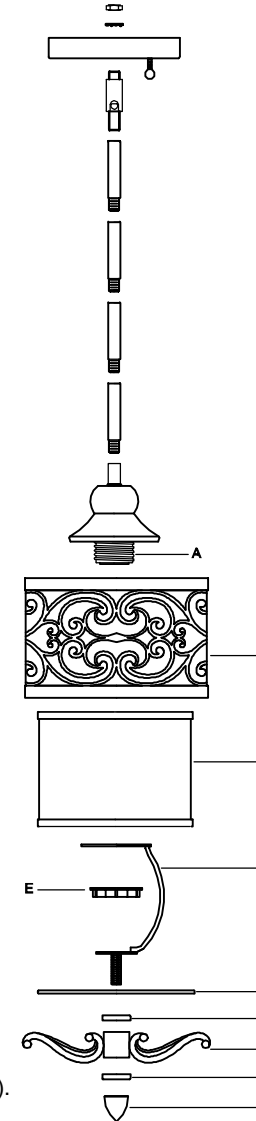
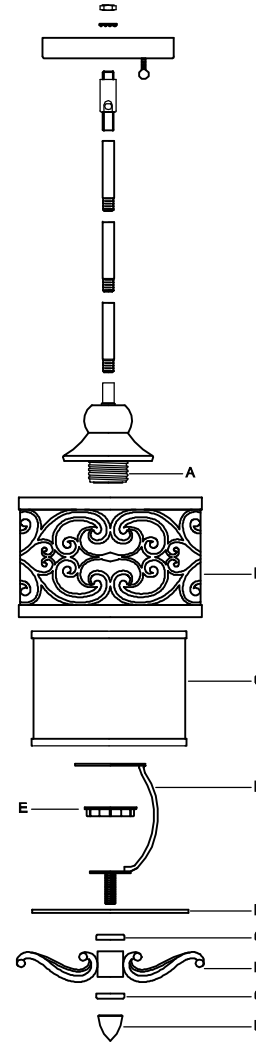


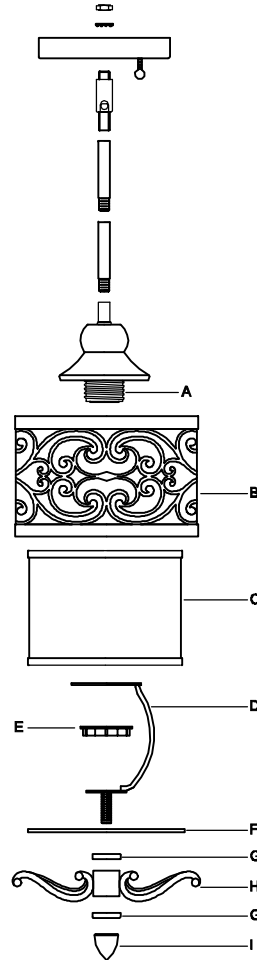

Assembly Instruction For 91150

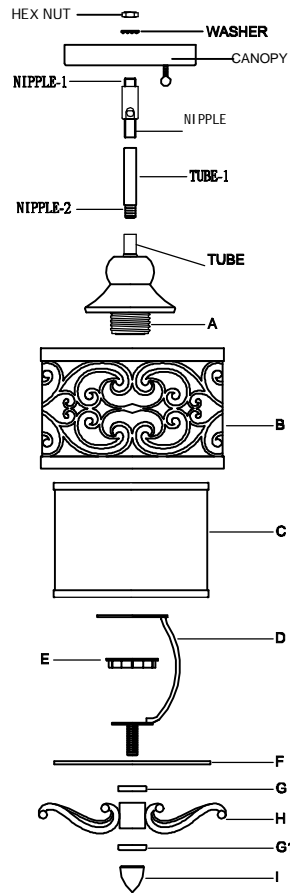

1. Attach the shade (B) to the shade framer, then attach them to the socket (A).
2. Attach the harp (D) to the shade (B) then secure it by socket ring (E).
3. Attach the diffuser (F), cover (G), completed arm sets (H) and cover (G1) to the nipple of harp (D) , then secured them by finial (I).
4. Screw the tube 1 to the tube so that the nipple 2 screw to the tube till tight.
5. Screw the screw the nipple to the tube 1 till tight.
6. Attach the canopy and washer to the nipple 1 then secured it by hex nut .