Assembly Instruction For 21266
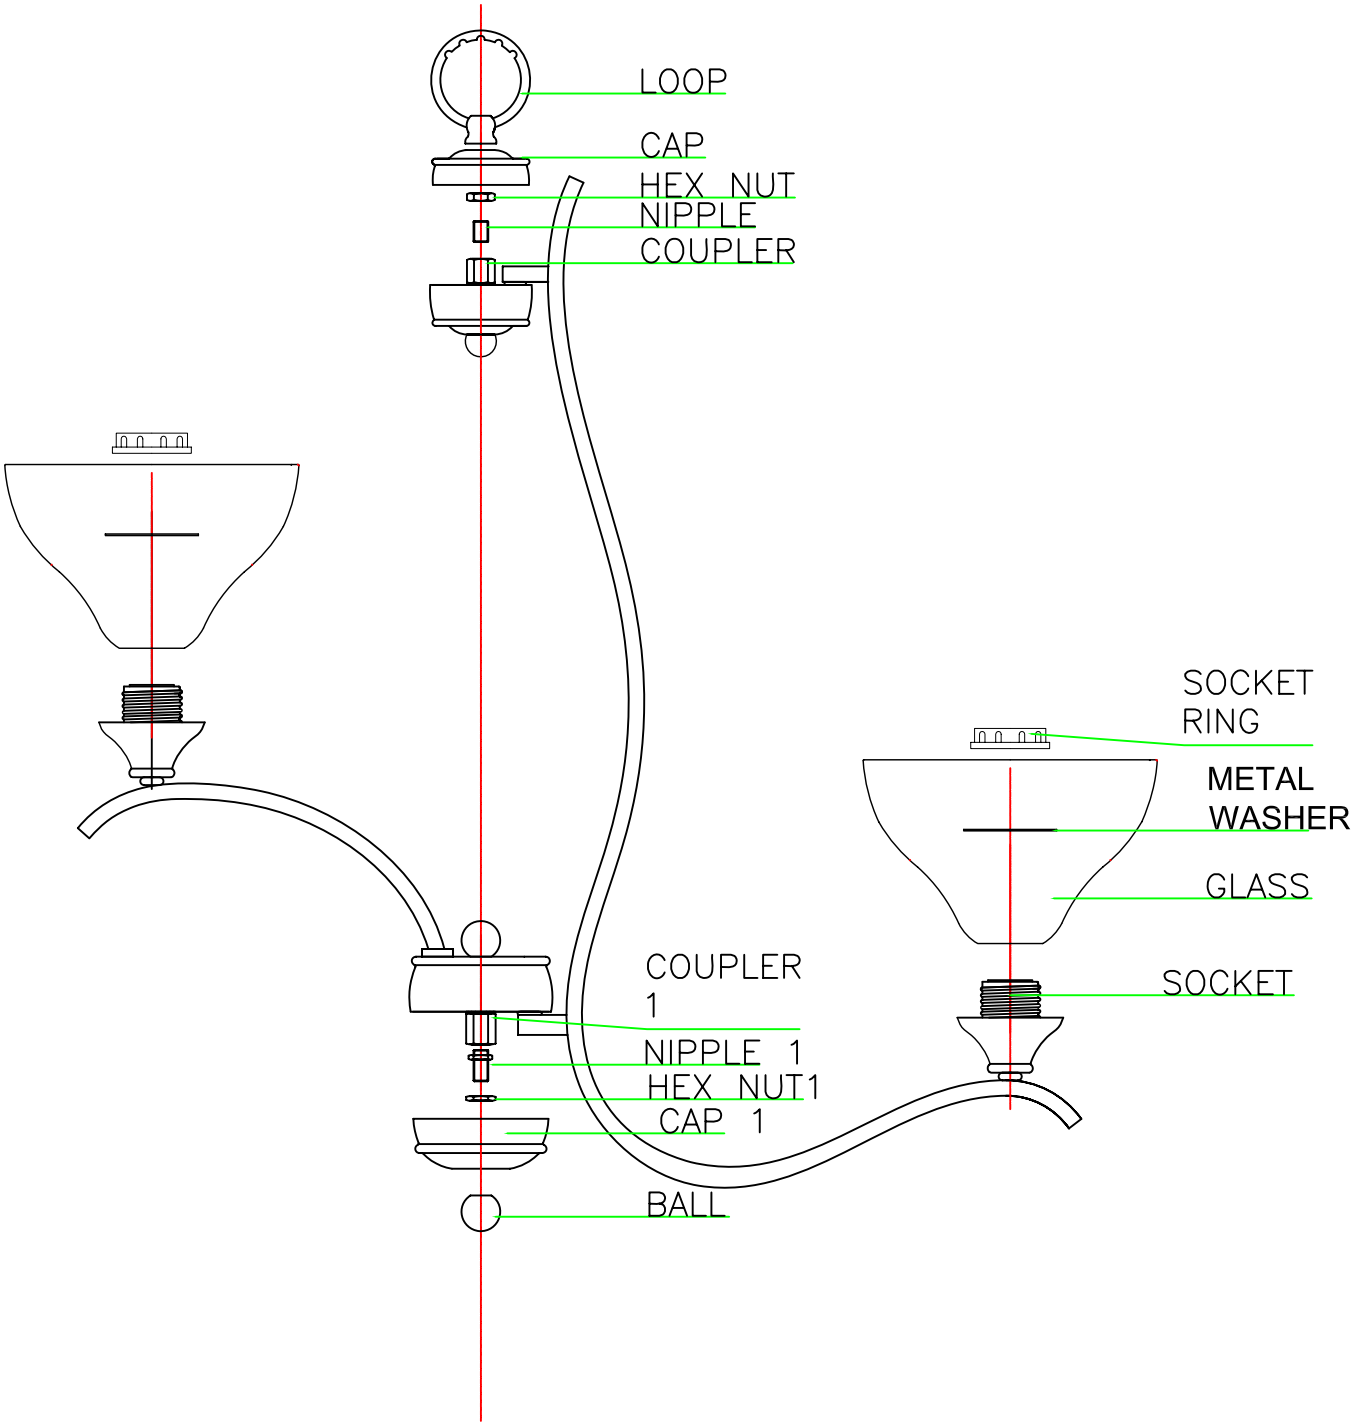
1.Turn the nipple into the coupler then secure by the hex nut.
2.Attach the cap on the nipple then secure by the loop.
3.Turn then nipple 1 into the coupler 1 then secure by the hex nut 1.
4.Attach the cap 1 on the nipple 1 then secure by the ball.
5.Attach the glass and metal washer on the socket then secure by the socket ring.