Assembly Instruction For22268
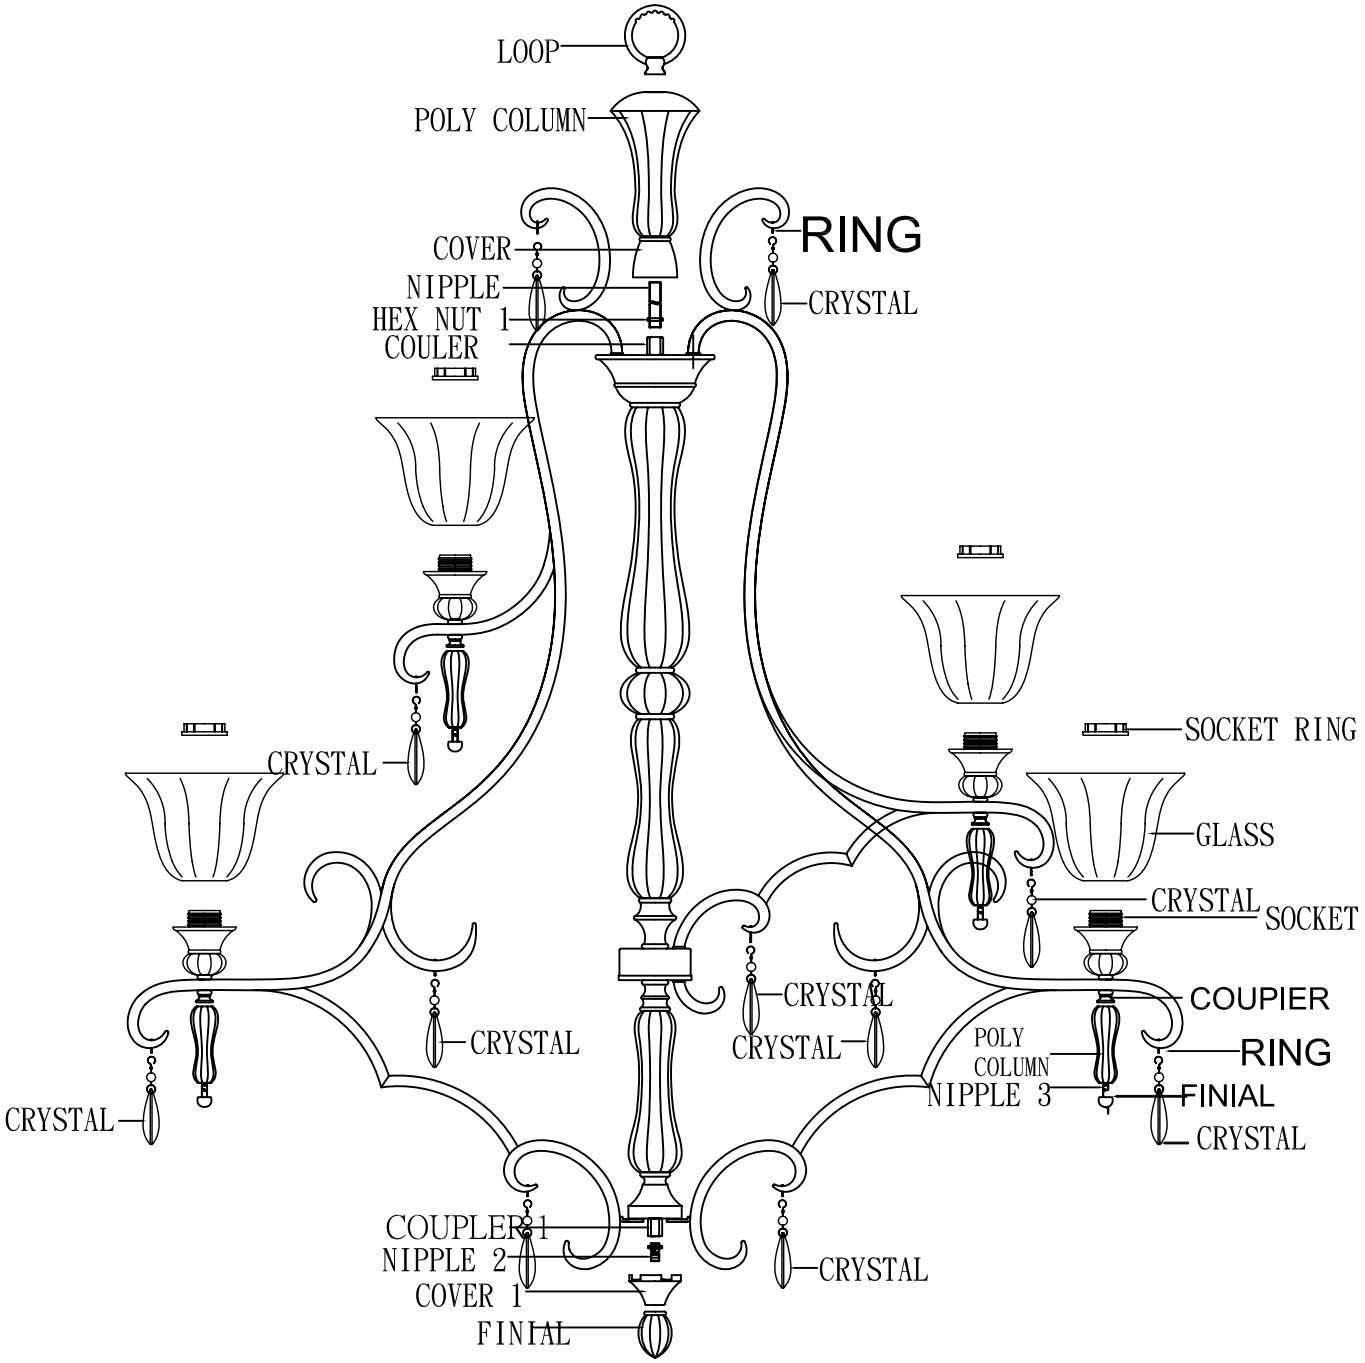
1.Spaced the arms level
2.Thread the nipple to the coupler then fix it by Hex nut1
3.Attach the poly column to the nipple the secure by loop
4.Thread the nipple2 to the coupler 1 attach tle cover to the cover1 the secure by finial
5.Thread the nipple3 to the coupler 2 the secure by finial1
6.Hang the crystals to the rings of the arm one by one
7.Attach the glass to the sockets then secure by socket ring